PHILIPS

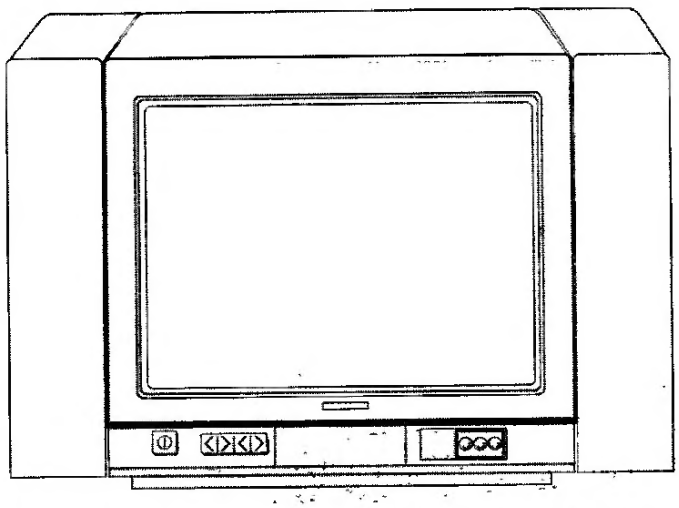

21GR2651 21GR2751 21GR2757
25GR5660 25GR5760 25GR5768
28GR5670 28GR5770 28GR5777

5.'20 RU LT 1

COLOUR TELEVISION
FARBFERNSEHER
TÉLÉVISEUR COULEUR
KLEURENTELEVISIE
TELEVISIORE A COLORI
TELEVISOR EN COLOR
TELEVISÃO A CORES
FARVEFJERNSYN
FARGE-TV
FÄRG-TV
VÄRITELEVISIO
ΕΓΧΡΩΜΗ ΤΗΛΕΟΡΑΣΗ

Downloaded from www.Manualslib.com manuals search engine

Home screen

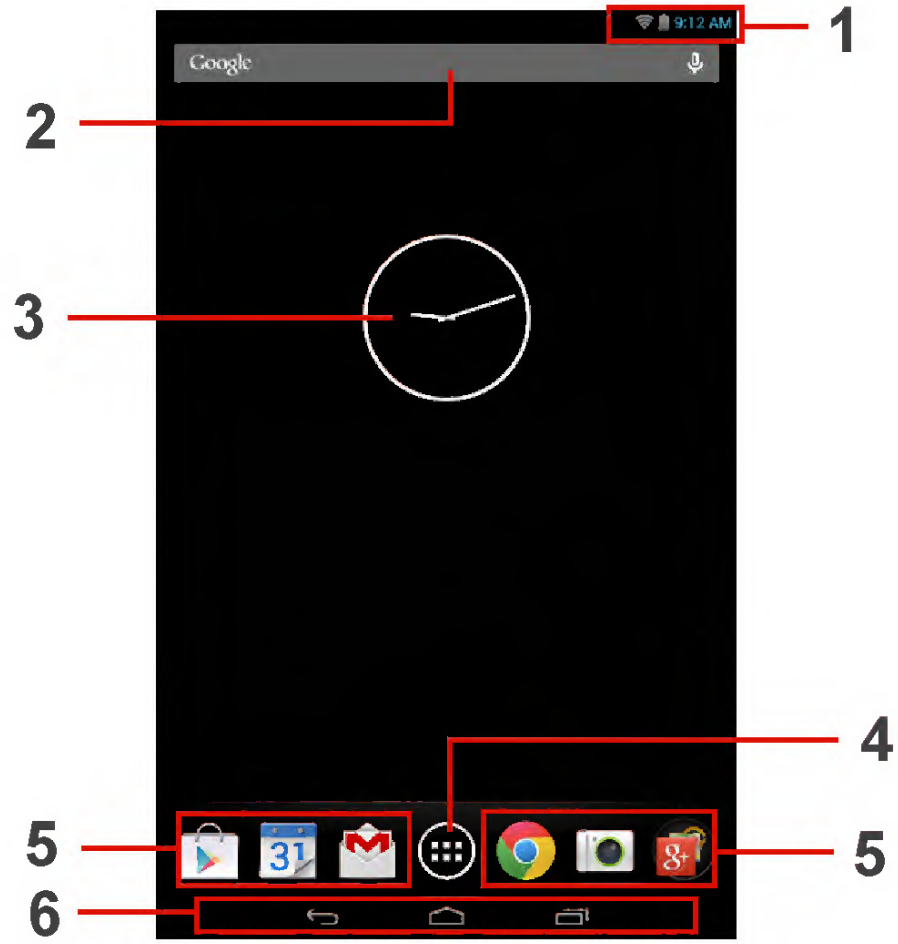

***Note**: Your tablet may have a different wallpaper to the one shown.*

1. Notification bar
2. Search
3. Widgets
4. Application menu (also known as "Apps")
5. App shortcuts
6. Navigation (Back, Home, Recent)

Downloaded from www.Manualslib.com manuals search engine

http://www.xiaoyu163.com

• **Circuit Boards Location**
SA-WMS225

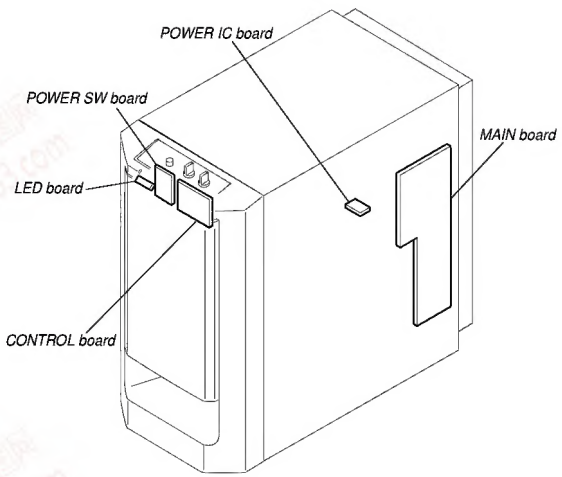

• **IC Block Diagrams**

– MAIN Board –
IC302 µPC1237HA

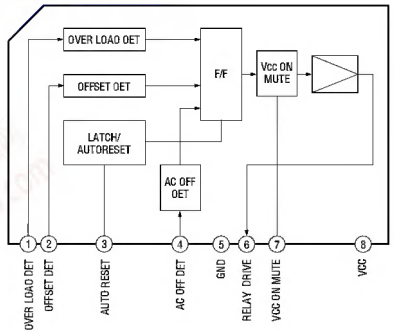

– POWER IC Board –
IC401 TDA7294

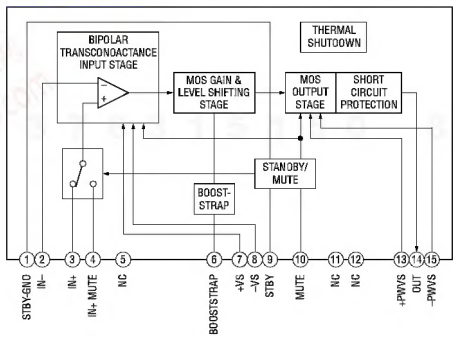

http://www.xiaoyu163.com

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

1 Remove fuse cover and fuse.

2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.

3 Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

Copyright

VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.
Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.
All other registered and unregistered trademarks are the property of their respective owners.

Manufactured under licence from BBE Sound, Inc. Licensed by BBE, Inc under one or more of the following US patents: 5510752,5736897. BBE and BBE symbol are registered trademarks of BBE Sound Inc.

Conventions

The following conventions are used in this manual:

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives additional information related to the current topic.
WARNING	Alerts you to any physical risk or system damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

Downloaded from www.Manualslib.com manuals search engine

3. Installing the Setup Wizard

Step 1 Insert the provided CD and wait for the autorun screen to appear.

Step 2 Click on **Install Wizard**.

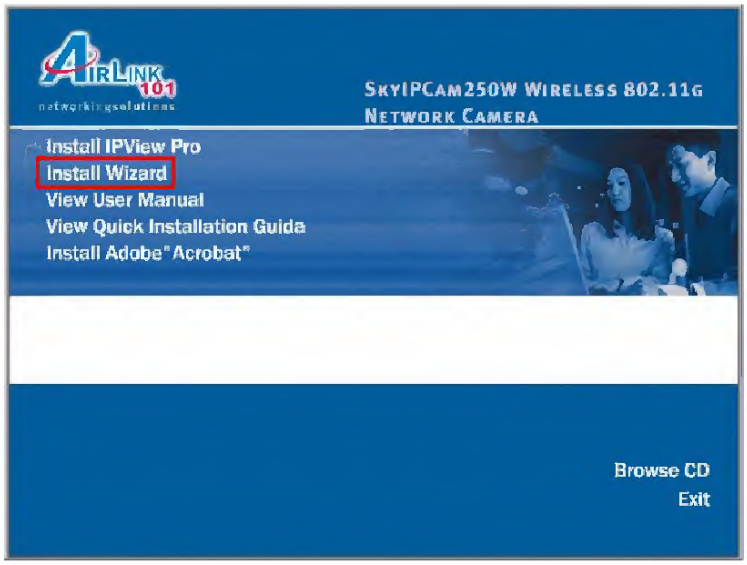

Note: *If the autorun screen does not appear automatically, go to* ***Start***, ***Run***, *type* ***D:\autorun.exe*** *(where* ***D*** *is the letter of your CD drive) and click* ***OK***.

Step 3 Click **Next**.

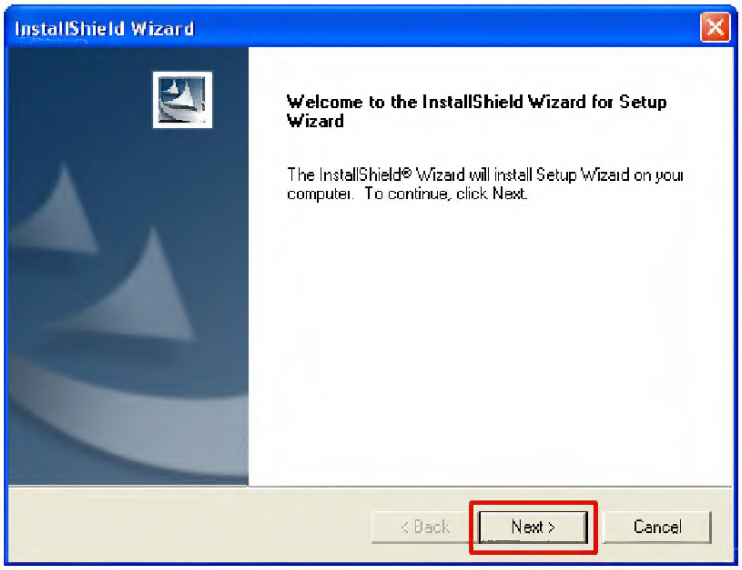
InstallShield Wizard
Welcome to the InstallShield Wizard for Setup Wizard
The InstallShield® Wizard will install Setup Wizard on your computer. To continue, click Next.
< Back
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

List of Tables

Table 1 Related Documents xi
Table 1-1 Controller Shelf Part Numbers and Model Descriptions 1-4
Table 1-2 Single Host, Single Adapter, with One Active Controller 1-17
Table 1-3 Single Host, Single Adapter, with Two Active Controllers 1-18
Table 1-4 Single Host, Dual Adapter, Two Port with Two Active Controllers 1-19
Table 1-5 Dual Host, Single Adapter, with One Active Controller per Host 1-20
Table 1-6 Controller Shelf Technical Specifications 1-21
Table 1-7 Controller Shelf Power and Physical Specifications 1-24
Table 2-1 LED/Reset Switch Interface 2-5
Table 2-2 Raid Levels Supported 2-9
Table 2-3 Shelf RAID Set Restrictions 2-9
Table 2-4 RAID 0+1 Example 2-13
Table 2-5 Response to Various AC Power Conditions 2-19
Table 3-1 Shelf Support Mounting Kits and Installation Guides 3-7
Table 3-2 RETMA Cabinet Shelf Support Parts List 3-8
Table 3-3 UPS Rack-mount Bracket Mounting Hardware List 3-11
Table 3-4 Controller Shelf Field Replaceable Units 3-29

Downloaded from www.Manualslib.com manuals search engine

Compaq Technician Notes

Weight in kg
Weight in lb

Any product or assembly marked with these symbols indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.

WARNING: Only authorized technicians trained by Compaq should attempt to repair this equipment. All troubleshooting and repair procedures are detailed to allow only subassembly/module-level repair. Any indications of component replacement or printed wiring board modifications may void any warranty.

WARNING: To reduce the risk of personal injury from electric shock and hazardous energy levels, do not exceed the level of repair specified in these procedures. Because of the complexity of the individual boards and subassemblies, do not attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs could create conditions that are hazardous.

WARNING: To reduce the risk of electric shock or damage to the equipment:

- If the system has multiple power supplies, disconnect power from the system by unplugging all power cords from the power supplies.
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature. The computer is designed to be electrically grounded. Plug the AC power cord into a properly grounded AC outlet only.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.

CAUTION: To properly ventilate your system, you must provide at least 12 inches (30.5 cm) of clearance at the front and back of the computer.

CAUTION: The computer is designed to be electrically grounded. To ensure proper operation, plug the AC power cord into a properly grounded AC outlet only.

Where to Go for Additional Help

In addition to this guide, the following information sources are available:

- User Documentation
- *Compaq Service Quick Reference Guide*
- Service Training Guides
- Compaq Service Advisories and Bulletins
- Compaq QuickFind
- Compaq Insight Manager
- Compaq Download Facility: Call 1-281-518-1418

Downloaded from www.Manualslib.com manuals search engine

Accelerator status: Possible data loss in cache	Possible data loss detected during power-up due to all batteries being below sufficient voltage level and no presence of the identification signatures on the array accelerator board.	There is no way to determine if dirty or bad data was in the cache and is now lost.
Accelerator status: Temporarily disabled	Array accelerator board has been temporarily disabled.	Check the Disable Code field.
Accelerator status: Unrecognized status	A status returned from the array accelerator board that DAAD does not recognize.	Obtain the latest version of DAAD.

Continued

Downloaded from www.Manualslib.com manuals search engine

Roger Beep Confirmation Tone

Your listener will hear an audible tone when you release the **Talk** button. This alerts the other party that you are finished talking and it is OK for them to speak.



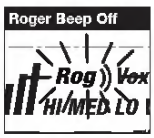



To turn roger beep on or off:

1. Press the **Mode/Power** button until the **Roger Beep** icon flashes. The current **on** or **off** setting is displayed.
2. Press the **Channel Up** or **Channel Down** button to select roger beep **on** or **off**.
3. Choose one of the following:
   a. Press the **Mode/Power** button to enter the new setting and proceed to other functions.
   b. Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
   c. Do not press any buttons for 15 seconds to enter the new setting and return to **Standby** mode.

Key Tone On/Off

When **Key Tone** is **On**, an audible tone will sound each time a button is pressed.





To turn key tone on or off:

1. Current key tone status On/Off will flash.
2. Press the **Channel Up** or **Channel Down** button to select key tone on or off.
3. Choose one of the following:
   a. Press the **Mode/Power** button to enter the new setting and proceed to other functions.
   b. Press **Talk** or **Call/Lock** button to enter the new setting and return to **Standby** mode.
   c. Do not press any buttons for 15 seconds to enter the new setting and return to **Standby** mode.

Channel Scan

Your microTALK® radio can automatically scan channels.



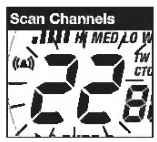



To scan channels:

1. Press and release the **Scan** button until the **Scan** icon and the channel numbers appear on the display.
2. Press and hold the **Scan** button to begin scanning channels.

> The radio ignores specific privacy codes while scanning channels.

The **Scan** icon will continue to be displayed when scan is **on**. Your radio will continue to scan all channels and stop if an incoming transmission is detected. Your radio will remain on that channel for 10 seconds.

During scanning (while receiving an incoming transmission), you can choose from the following:

a. Press and hold the **Talk** button to communicate on that channel. Your radio will remain on that channel and return to **Standby** mode.
b. Press the **Channel Up** or **Channel Down** button to resume scanning channels.
c. Press and hold the **Scan** button to return to **Standby**.

CXT1095_FLT_MANL.indd 14-15 12/20/13 2:40 PM
Downloaded from www.Manualslib.com manuals search engine

HOW TO ADJUST A SETTING

1. Press the MENU-button to activate the OSD window.
2. Press < or > to select the desired function.
3. Press the MENU-button to select the function that you want to adjust.
4. Press < or > to change the settings of the current function.
5. To exit and save, select the exit function. If you want to adjust any other function, repeat steps 2-4.

ADJUSTING THE PICTURE

The descriptions for function control LEDS

Main Menu Icon	Sub Menu Icon	Sub Menu Item	Description
		Contrast	Adjusts the contrast between the foreground and background of the screen image.
		Brightness	Adjusts the background brightness of the screen image.
		Focus	Adjusts picture Focus. (available in Analog mode only)
		Clock	Adjusts picture Clock. (available in Analog mode only)